

Connect it Power DS/RS guide

**Power Box DS/
DS2/RS Amp**



Connect it Power RS DS 48V-48V

Any 48V amplifier



**Power Box RS
Phono**



Connect it Power RS 20V mini XLR - mini XLR Phono

Phono Box RS



**Power Box RS
uni 1 Way/4Way**



Connect it Power RS 20V miniXLR - miniXLR

Connect it Power RS MiniXLR - 18V 2,5

**Any RS product
except
amplifiers**



Connect it Power RS miniXLR - Phono DC 15V 2.1 // Connect it Power RS - TT 15V miniXLR - 2.1

Connect it Power RS - TT 15V miniXLR - 2.1



RPM 9/10
Xtension 10/12
Signature 10/12

15V DC turntable



Connect it Power DS 18V 2.5-15V 2.1

Connect it Power DS 15V 2.1 - Phono DC 15V 2.1

**Power Box
MaiA DS**



Connect it Power DS 24V 2.1-2.1

**MaiA DS or any
24V amp**



**Power Box
DS/DS2 Sources**



Connect it Power DS 18V 2.5-2.5

Any 18V product



**Power Box
MaiA**



Connect it Power DS 9V 1.3-1.3

Any 9V product



Accu Box S2 USB



Connect it Power DS 20V 2.1-2.1

**MaiA / S2
or any 20V amp**



Accu Box S2



Mirco USB Cable 5V

**Any S2 product
with 5V**



Power Box S2



Connect it Power DS 20V 2.1-2.1

S2 / DS / DS2

- ⊙ 2.5mm | Connect it Power DS 18V 2.5-2.5 | 2.5mm ⊙
- ⊙ 2.5mm | Connect it Power DS 18V 2.5-15V 2.1 | 2.1mm ⊙
- ⊙ 2.1mm | Connect it Power DS 24V 2.1-2.1 | 2.1mm ⊙
- ⊙ 2.1mm | Connect it Power DS 20V 2.1-2.1 | 2.1mm ⊙
- ⊙ 2.1mm | Connect it Power DS 15V 2.1 - Phono DC 15V 2.1 | 2.1mm ⊙
- ⊙ 1.3mm | Connect it Power DS 9V 1.3-1.3 | 1.3mm ⊙

RS

- ⊙ XLR | Connect it Power RS DS 48V-48V | XLR ⊙
- ⊙ mini XLR | Connect it Power RS 20V mini XLR - mini XLR Phono | mini XLR ⊙
- ⊙ XLR | Connect it Power RS 20V miniXLR - miniXLR | XLR ⊙
- ⊙ XLR | Connect it Power RS MiniXLR - 18V 2,5 | 2.5mm ⊙
- ⊙ XLR | Connect it Power RS miniXLR - Phono DC 15V 2.1 | 2.1mm ⊙
- ⊙ XLR | Connect it Power RS - TT 15V miniXLR - 2.1 | 2.1mm ⊙

⊏ USB A | Mirco USB Cable 5V | Micro USB B ⊏